

## Operation Summary

System Disarm	<b>[4-digits Password] + [Enter]</b>
Away Arm	Press hold keypad number <b>[1]</b> for 1 seconds / <b>[4-digits Password] + [Enter]</b>
Stay Arm	Press hold keypad number <b>[2]</b> for 1 seconds
Vacation Arm	Press hold keypad number <b>[3]</b> for 1 seconds
Force Arm	Press hold keypad number <b>[4]</b> for 1 seconds
Bypass Zone	Press hold keypad number <b>[5]</b> for 1 seconds + <b>[zone numbers 01 ~ 16] + [Enter]</b>
Automation Point On / Off	Press hold keypad number <b>[6]</b> for 1 seconds + <b>[Automation Points 01 ~ 16] + [Enter]</b>
Service	Press hold keypad number <b>[7]</b> for 1 seconds
Chime Zone	Press hold keypad number <b>[8]</b> for 1 seconds + <b>[zone numbers 01 to 16] + [Enter]</b>
System Test*	Press hold keypad number <b>[9]</b> for 1 seconds
Event Memory**	Press hold keypad number <b>[0]</b> for 1 seconds
Activate Panic Alarm	Press hold keypad number <b>[Panic]</b> for 1 seconds
Keypad Buzzer On / Off	<b>On = Slide Upward, Off = Slide Downward</b>

### **Remark:**

#### **P1 & P2 LED Indicator**

Yellow Slow Blink = Zone Bypassed

Red Slow Blink = Arm with Zone Bypassed

#### **For Arm / Disarm Partitioning**

Press 1 = P1 (Partition 1)

Press 2 = P2 (Partition 2)

Press 0 = All Partition

\***System Test List** = Zone test, Battery test, Siren 1 & 2 test, Strobe Light test, CMS test

\*\***Event Memory** = 50 Event Logs

For more details user manual info, please download from [www.vivos.com.my](http://www.vivos.com.my)



**VIVOS**<sup>®</sup>  
Fingertips To Your Protection


**USER MANUAL**

[www.vivos.com.my](http://www.vivos.com.my)

# ViVOS LCD User Programming Guide (VG1-16z-V1)



Enter Programming: [Mode + 4 x Digits Code + Enter]  
(Default Code: 1234)

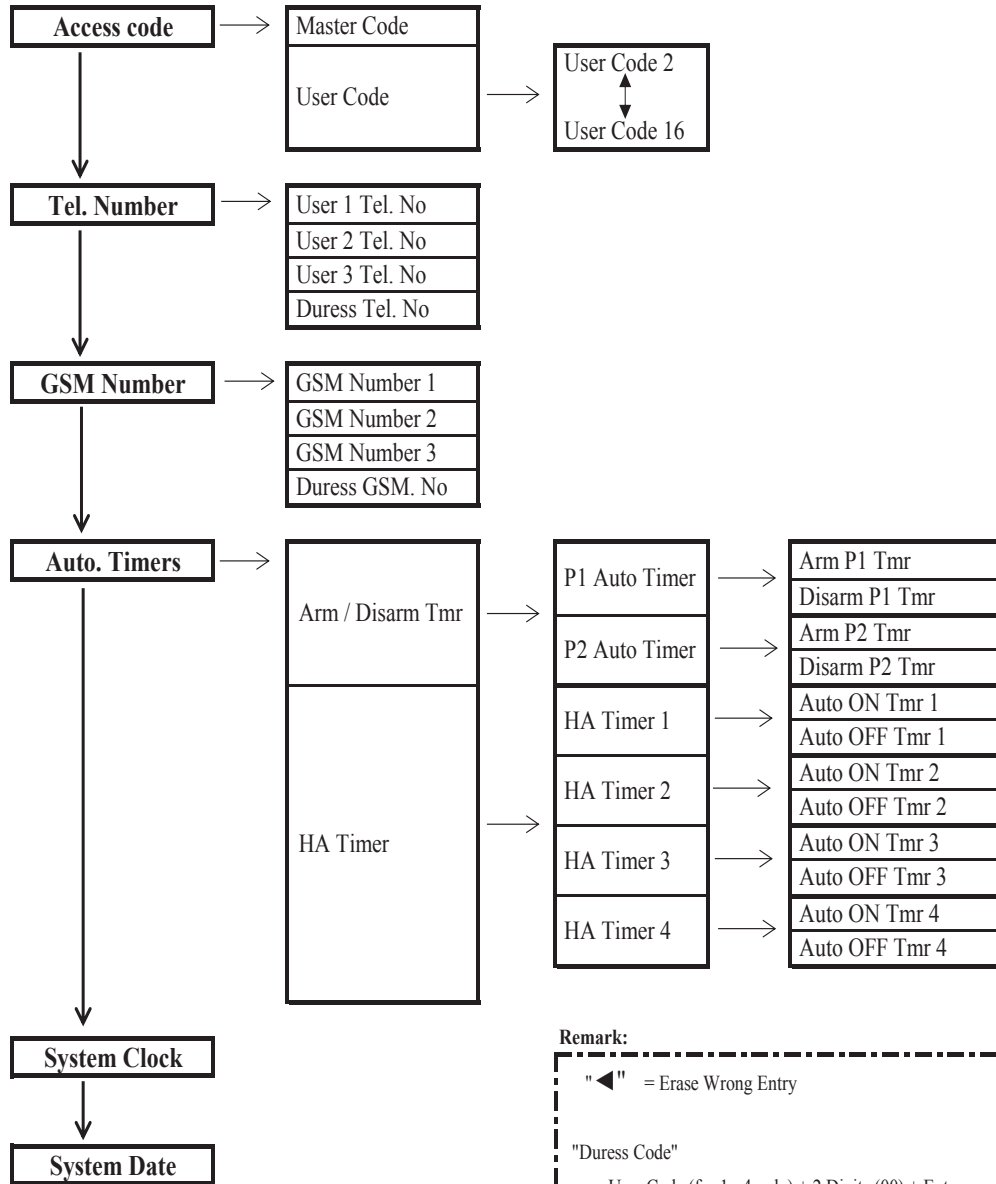

**Remark:**  
 "◀" = Erase Wrong Entry  
 "Duress Code"  
 = User Code (for 1~4 only) + 2 Digits (00) + Enter

Exit Programming: [Mode + Enter]

# Customer System Information



Installer Company : \_\_\_\_\_  
 Contact Person : \_\_\_\_\_  
 Contact Number : \_\_\_\_\_  
 Installation Date : \_\_\_\_\_  
 Partition 1 Entry Time : \_\_\_\_\_ Exit : \_\_\_\_\_  
 Partition 2 Entry Time : \_\_\_\_\_ Exit : \_\_\_\_\_  
 User 1 Tel Number : \_\_\_\_\_ GSM No 1 : \_\_\_\_\_  
 User 3 Tel Number : \_\_\_\_\_  
 User 3 Tel Number : \_\_\_\_\_  
 Duress Tel Number : \_\_\_\_\_ Duress GSM No : \_\_\_\_\_

Zone Descriptions	
1	
2	
3	
4	
5	
6	
7	
8	
9	
10	
11	
12	
13	
14	
15	
16	

Example : Vibration / Magnetic / PIR = Main door, Partition 1 / 2