

VIRTUO AUTO GATE INSTALLATION GUIDE

1. How to Program the Transmitter into the LED 240

- (i) Power on the LED 240
- (ii) The programming has to be done within 1 minute. After 1 minute, the memory is lock to be prevent any accidental write or erase of the memory.
- (iii) The program new transmitter into LED 240, press once and release the **Program Button**. The Status LED will blink to wait for 10 seconds to read the nwe transmitter.
- (iv) Within 10 seconds, press the desire button of the transmitter for 2 seconds.
- (v) The Status LED of LED 240 will be blink quickly to indicate successful of programming.
- (vi) There are 8 ways to program the transmitter as describe on the table below:

Action on Program Button	Button 1 Function	Button 2 Function	Button 3 Function	Button 4 Function
Press Once and Release	Open/Close	Open/Close	-	-
Press Twice and Release	Light On/Off	Open/Close	-	-
Press 3 Times and Release	Open Only	Open/Close	Light On/Off	Close Only
Press 3 Times and Release	Open Only	Open/Close	-	Close Only
Press 3 Times and Release	Program Only One Button - The Other Buttons of Transmitter are Void			
Press 3 Times and Release	Open Only	Open/Close	3sec System Lock/Unlock	Close Only
Press 3 Times and Release	Open/Close	Open/Close	Close Only	-
Press 3 Times and Release	-	Open/Close	Close Only	Open/Close

2. To Erase the Memory

Press and hold the **Program Button** fo 5 second until the Status LED blink to indicat successful of erase.

(Note: This has to be done on the first minute when LED 240 is power up)

1. LED 240 遥控器对拷方法：

- (i) 开启 LED 240 的电源
- (ii) 这个对拷过程必须在一分钟内完成。一分钟后，对拷记忆内存将会被上锁，无法做出对拷或清除动作
- (iii) 在LED 240上的“Program Button” 点按一次，“Status LED” 将会慢闪10秒以等待发射器信号
- (iv) 在 10 秒内按发射器上任何一个按键持续 2秒
- (v) 当“Status LED”快闪，遥控器对拷已经成功
- (vi) 遥控器可以选择八个不一样的功能：

Program Button 点按次数	Button 1 功能	Button 2 功能	Button 3 功能	Button 4 功能
按一次	开门/关门	开门/关门	-	-
按二次	柱子灯 开启/关闭	开门/关门	-	-
按三次	开门	开门/关门	柱子灯 开启/关闭	关门
按四次	开门	开门/关门	-	关门
按五次	只对拷一个按键, 其他按键无任何功能			
按六次	开门	开门/关门	(三秒) 系统 上锁/解锁	关门
按七次	开门/关门	开门/关门	关门	-
按八次	-	开门/关门	关门	开门/关门

2. 消除所有遥控器对拷记忆

按着“Program Button” 五秒直到“Status LED” 慢闪，清除对拷记忆已经完成
(注: 这个动作必须在开启电源后的一分钟内完成)