


VG1 Mainboard Wiring Diagram

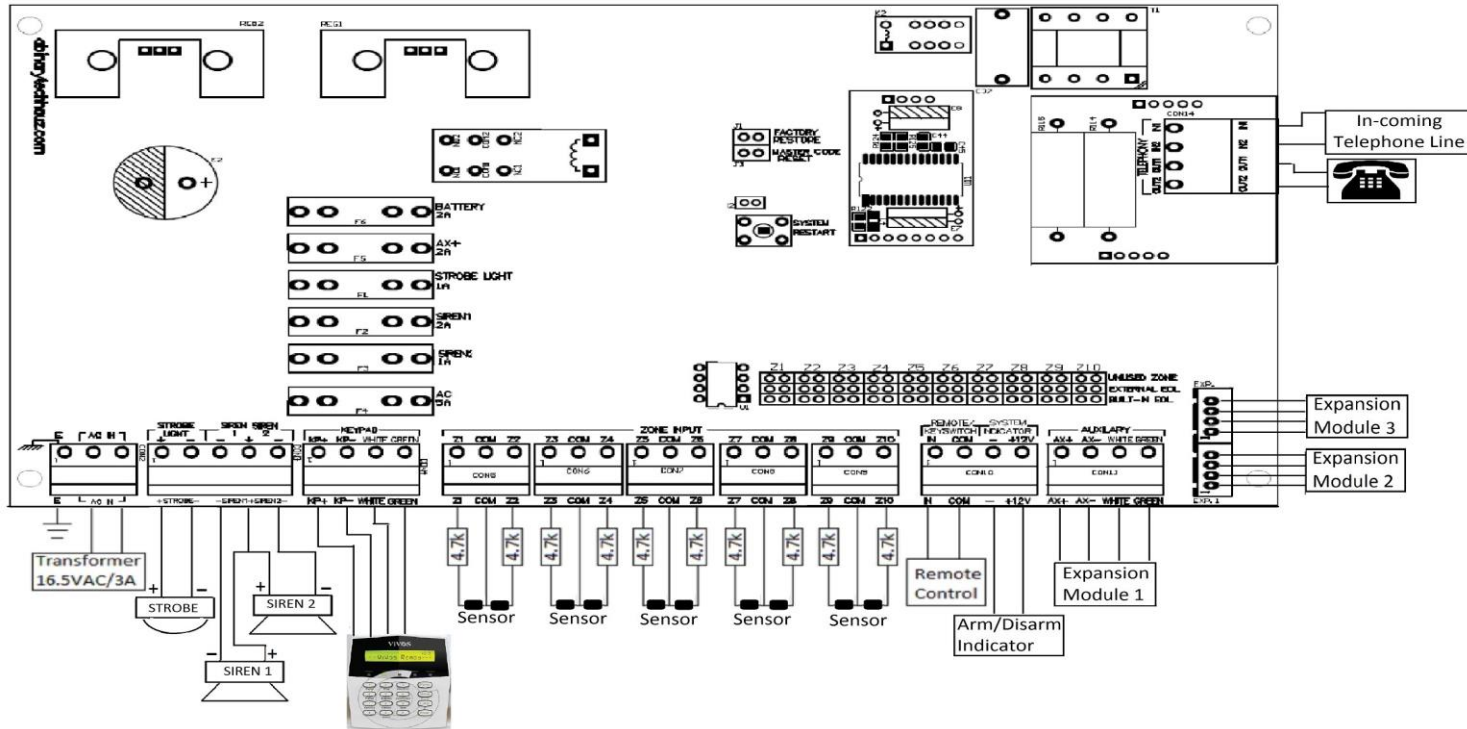

Symbol	Description
E	Earth
Ac In	16.5VAC Input
Z1	Zone 1
Z2	Zone 2
Z3	Zone 3
Z4	Zone 4
Z5	Zone 5
Z6	Zone 6
Z7	Zone 7
Z8	Zone 8
Z9	Zone 9
Z10	Zone 10

Symbol	Description
COM	Negative(Ground)
IN	Input for remote/key switch
+12V	Positive(+) output for Arm/Disarm indication
-	Negative(-) output for Arm/Disarm indication
AX +	Auxiliary positive(+) output
AX -	Auxiliary negative(-) output
WHITE	Communication Data(+)
GREEN	Communication Data(-)
IN1	Incoming telephone line
IN2	Incoming telephone line
OUT1	Connect to phone set
OUT2	Connect to phone set

Zone Jumper Setting	
Unused Zone	=
Extremal EOL	=
Built-in EOL	=
Remark:	
No Jumper	=
Zone will not work	